



HOW TO USE THIS MANUAL

Follow the Maintenance Schedule recommendations (page 1-12) to ensure that the vehicle is in peak operating condition and the emission levels are within the U.S. Environmental Protection Agency standards. Performing the first scheduled maintenance is very important. It compensates for the initial wear that occurs during the break-in period. (USA only)

Sections 1 through 3 apply to the whole motorcycle, while sections 4 through 19 describe parts of the motorcycle, grouped according to component or system.

Find the section you want on this page, then turn to the table of contents on page 1 of that section.

Most sections start with an assembly or system illustration, service information and troubleshooting for the section. The subsequent pages give detailed procedures for the section.

If you are not sure of the source of the trouble, go to section 20, TROUBLESHOOTING.

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. HONDA MOTOR CO., LTD. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATEVER.

NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION.

HONDA MOTOR CO., LTD
SERVICE PUBLICATIONS OFFICE

CONTENTS

	GENERAL INFORMATION	1
	LUBRICATION	2
	INSPECTION AND ADJUSTMENT	3
ENGINE	FUEL SYSTEM	4
	ENGINE REMOVAL/INSTALLATION	5
	CYLINDER HEAD/VALVE	6
	CYLINDER/PISTON	7
	CLUTCH	8
	GEARSHIFT LINKAGE	9
	CRANKCASE	10
	PRIMARY SHAFT/TRANSMISSION	11
	CRANKSHAFT	12
CHASSIS	FRONT WHEEL/SUSPENSION	13
	REAR WHEEL/SUSPENSION	14
	HYDRAULIC BRAKE	15
ELECTRICAL	BATTERY/CHARGING SYSTEM	16
	IGNITION SYSTEM	17
	ELECTRIC STARTER	18
	SWITCHES	19
	TROUBLESHOOTING	20